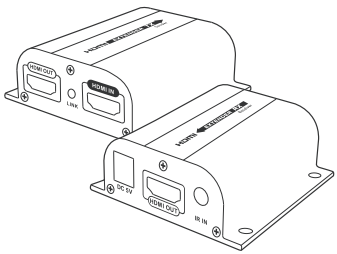 


HDMI Extender OVER NETWORK

User's manual









• Introduction
This HDMI extender over cat6 extends the HDMI content up to 60 meters for 1080p.

• Important safety notice

- Do not mix up HDMI to RJ45 sender and RJ45 to HDMI receiver before installation.
- Do not hot plug when it is working.
- Use DC5V power supply only. Make sure specification matched if using adapters not supplied by factory.

• Package Contents

 
 HDMI to RJ45 sender TX*1pcs	 RJ45 to HDMI receiver RX*1pcs	 User manual*1pcs
 DC5V1A*2pcs	 IR blaster extension cable *1pcs	 IR receiver extension cable*1pcs

• Installation Requirements

- HDMI source device(computer graphics card, DVD,PS3, HD monitoring equipment etc).
- HDMI display device like SDTV, HDTV, projector with HDMI port.
- UTP/STP cat6/6A/7 cable, follow standard IEEE-568B.

 
 
• Panel Description

1. HDMI to RJ45 transmitter

 ① ② ③	 ④ ⑤ ⑥ ⑦
--	--

- HDMI signal output
- HDMI signal indicator led
It lights on all the time with HDMI signal input, flashes with no signal input.
- HDMI signal input
- IR signal output to connect with blaster extension cable
- RJ45 signal output
- Reset
- DC5V power input

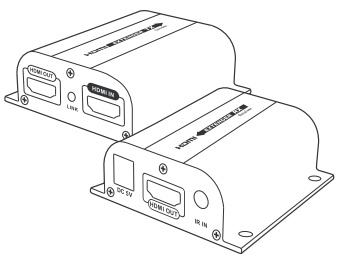 
2. RJ45 to HDMI receiver

 ① ② ③	 ④ ⑤ ⑥
--	--

- Reset
- RJ45 signal input
- RJ45 indicator led
It lights on all the time with HDMI signal transmission, flashes with no signal transmission.
- DC5V power input
- HDMI signal output
- IR signal input to connect with IR receiver extension cable

HDMI Extender OVER NETWORK

User's manual









• Introduction
This HDMI extender over cat6 extends the HDMI content up to 60 meters for 1080p.

• Important safety notice

- Do not mix up HDMI to RJ45 sender and RJ45 to HDMI receiver before installation.
- Do not hot plug when it is working.
- Use DC5V power supply only. Make sure specification matched if using adapters not supplied by factory.

• Package Contents

 
 
 HDMI to RJ45 sender TX*1pcs	 RJ45 to HDMI receiver RX*1pcs	 User manual*1pcs
 DC5V1A*2pcs	 IR blaster extension cable *1pcs	 IR receiver extension cable*1pcs

• Installation Requirements

- HDMI source device(computer graphics card, DVD,PS3, HD monitoring equipment etc).
- HDMI display device like SDTV, HDTV, projector with HDMI port.
- UTP/STP cat6/6A/7 cable, follow standard IEEE-568B.

 

• Panel Description

1. HDMI to RJ45 transmitter

 ① ② ③	 ④ ⑤ ⑥ ⑦
---	---

- HDMI signal output
- HDMI signal indicator led
It lights on all the time with HDMI signal input, flashes with no signal input.
- HDMI signal input
- IR signal output to connect with blaster extension cable
- RJ45 signal output
- Reset
- DC5V power input

2. RJ45 to HDMI receiver

 ① ② ③	 ④ ⑤ ⑥
--	--

- Reset
- RJ45 signal input
- RJ45 indicator led
It lights on all the time with HDMI signal transmission, flashes with no signal transmission.
- DC5V power input
- HDMI signal output
- IR signal input to connect with IR receiver extension cable